


Installation guide for Privacy Fence

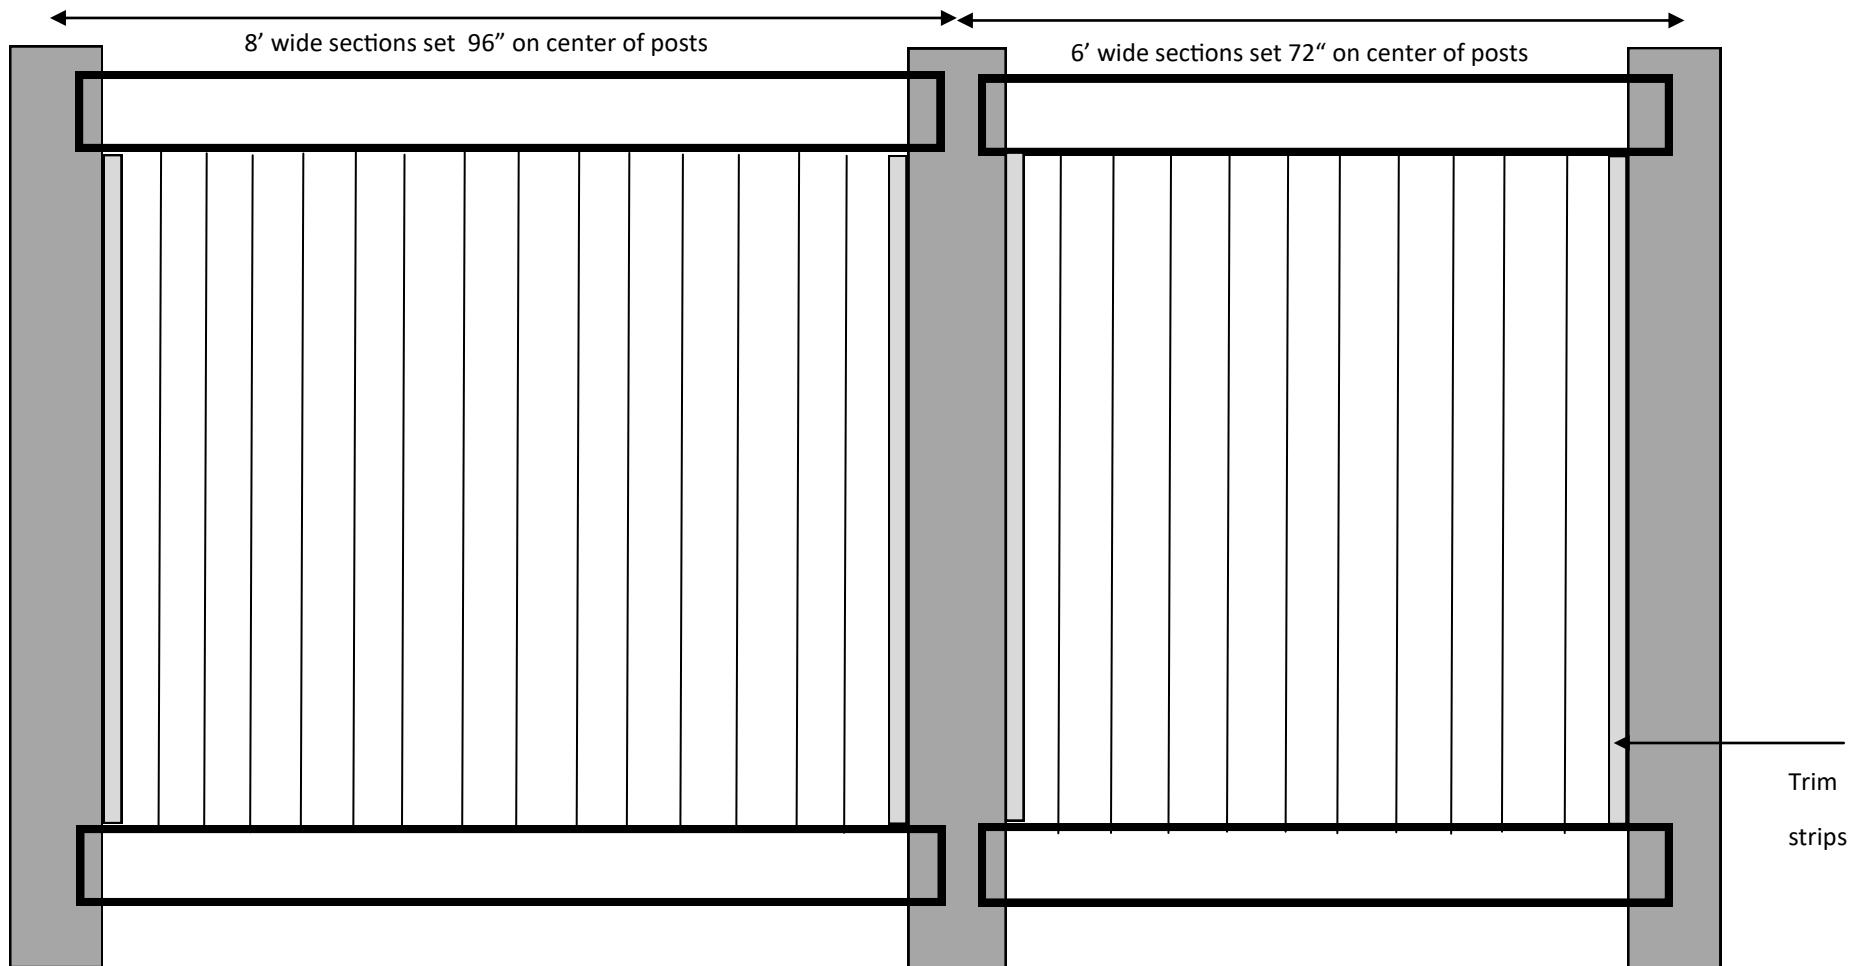

Set posts 24" in ground in cement. FENCE height is to top of post (not to top of rail)

Once cement has set, slide one end of bottom rail in post then slide other end in opposite post until the notches are completely in post.

(you can use the bottom rails to aid in spacing posts by installing them as you go. Be sure to leave a slight amount of slack for expansion and contraction)

Secure trim strips to post by either gluing or using aluminum or stainless pan head screws.

Slip boards into bottom rail one at a time snapping them together as you go.

Slide top rail into one post then work over boards then snap other end of rail into post. Making sure notches are inside posts.