



## Typical gate installation


Hinge post with aluminum insert top view

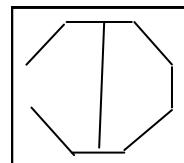

Gate top view



Latch post top view

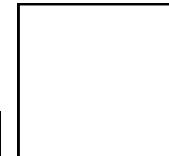

Gate will set flush with post

Gate openings are the size you ordered. We allow for hardware.

Example if you ordered a 48" wide gate the opening you set will be 48".

Set post(s) 24" in ground in concrete. Allow concrete to set.

Insert aluminum post stiffener.

Pour concrete INSIDE post to ground level around stiffener to secure stiffener inside post.

Allow concrete to set before installing gate.

Hinges will turn two ways. Be sure you have them turned so gate will sit like diagram above.

Not to scale